


Aura Conference Speaker™

MCP-BT-USB

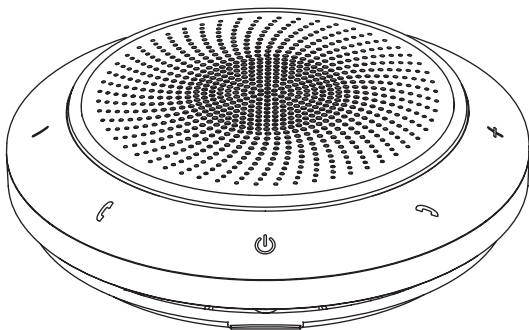

USER GUIDE

 SPRACHT®

CONTENTS

Features i

Product Overview 1

Placement - Small Conference Room 2

Placement - On Desk 2

Charging - USB Charging 3

Automatic Power Off 3

Battery Status 3

Connecting - To a Computer 3

Connecting - To a Smartphone 3

Buttons 4

LED Light Ring 5

Voice Assistant Button 5

FCC Statement 5


Warranty 6

FEATURES


Thanks for choosing Aura Conference Speaker™. It's important to read this User Manual: it will help you maximize your speaker usage experience.

- Immersive sound for calls and music
- Intuitive plug and play connectivity - connect to laptop, smartphone and tablet via USB or Bluetooth
- Integrated busy light
- Flexible and scalable for small meetings
- Interact with your voice assistant with the one-touch voice assistant button

PRODUCT OVERVIEW

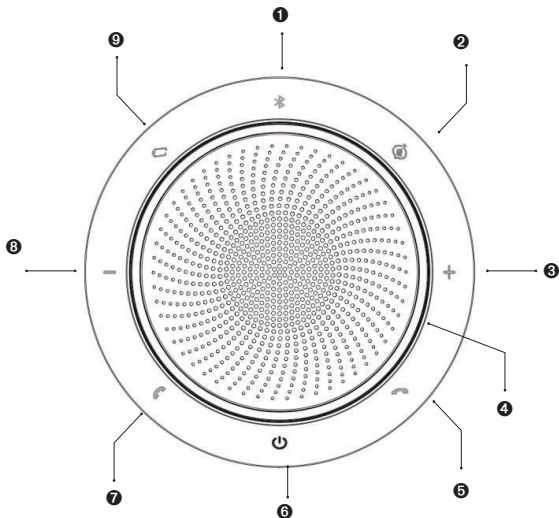


Showing USB Cable

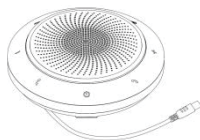

Showing Stand



- ❶ Bluetooth Indicator
- ❷ Mute/Voice Assistant
- ❸ Volume Up
- ❹ Busy Light
- ❺ End Call
- ❻ Power On-Off switch
- ❼ Answer Call
- ❽ Volume Down
- ❾ Battery Status

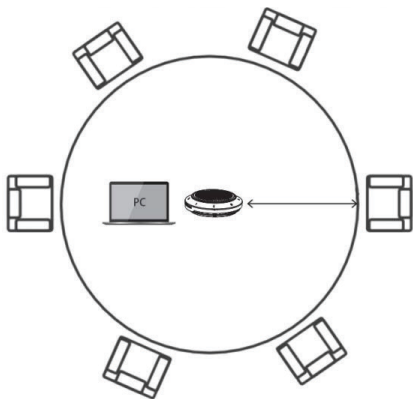


PLACEMENT

SMALL CONFERENCE ROOM

Position the speaker in the center of the table, up to a distance of 6' / 2m from each participant. A single Aura Conference Speaker is ideal for up to 6 people.

ON A DESK

When using the speaker at your desk we recommend you use the stand on the underside of the unit. This will better direct the sound towards you and will provide more low-end audio.

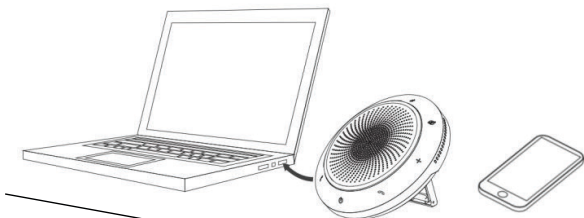

CHARGING

USB CHARGING


Plug the Speaker into a USB power source using the attached USB cable. The battery supplies up to 15 hours of talk time and takes about 3 hours to fully charge.

AUTOMATIC POWER OFF

To preserve battery life while the unit is unplugged, the Speaker will automatically power off when it has not been connected to a power source for 15 minutes.:

BATTERY STATUS

To view the current battery status, press the Battery Status button. This will turn on the LED light. When the battery is full, the LED lights Green; when the battery is medium, the Blue LED lights; when the battery is low, the Red LED shows. The Red LED will flash in the case of a very low battery.

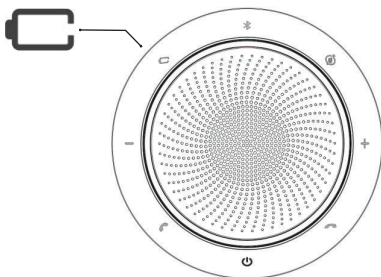

CONNECTING

CONNECT TO A COMPUTER - PC/MAC

Using the cable on the Speaker, plug the Speaker into a USB port on your PC/Mac. You may have to select the Speaker as the speaker as the output device and the mic as input device.

CONNECT TO A SMARTPHONE

Hold the Bluetooth button for 2 seconds and follow the voice-

guided instructions to pair to your smartphone. The Bluetooth range is about 33' (10m).








To disconnect or reconnect, double tap the Bluetooth button again.

BUTTON VISIBILITY

The buttons are backlit and only visible when the Speaker is powered on. After 20 seconds of inactivity the buttons will fade, and can be reactivated by tapping the area where the buttons are located.

The Voice assistant button and Mute button will only be visible under certain conditions (such as: the Voice assistant button is only visible when the Speaker is connected to a smartphone and not on call).

VOICE ASSISTANT BUTTON

Button	Button	Use
	Power On/Off	Press/hold 2s
	Answer Call	Press Answer Call Button
	End or Reject Call	Press End Call Button
+ / -	Volume Up or Down	Press Volume Up or Volume Down Button
	Mute/ Unmute Microphone	Press Mute Button
	Battery Status	Press Battery Status Button
	Pairing, Connect Bluetooth Device	Press Bluetooth Button
	Voice Assistant for Smartphone	Press Voice Assistant Button - only visible when paired with smartphone

	The LED Light Ring
Activity	Result
Power On or Off	LED Light Ring flashes Green, Blue, and Red
Incoming Call	LED Light Ring shows pulsing Green
On Call	LED Light Ring glows Red
Mute	LED Light Ring shows pulsing Red
Low Battery	LED Light Ring flashes Red

By default, the voice assistant button will activate your smartphone's voice assistant (Siri®, Google Now™, Cortana™, or other).

When you press the voice assistant button, the button will change to Green light, and it will wake the voice assistant.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty Information

Spracht warrants its products against defects or malfunctions in material and workmanship under normal use and service, with the exceptions stated below. This warranty lasts for one year from the original date of purchase. Coverage terminates if you sell or otherwise transfer the product. In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying the product.

Spracht shall (at its option) repair or replace a defective unit covered by this warranty, or shall refund the product purchase price. Repair, replacement with a new or reconditioned unit, or refund, as provided under this warranty, is your exclusive remedy. This warranty does not cover any damages due to accident, misuse, abuse, or negligence. Spracht shall not be liable for any incidental or consequential damages. Some states do not allow limitation or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

To make a warranty claim, the purchaser must obtain a return authorization number (RA) from Spracht (serial number and purchase date required), and then return the product to Spracht at purchaser's expense. A copy of the original dated receipt or shipping document must accompany the product. To obtain a return authorization, see "Warranty" on our website at www.spracht.com, send an e-mail to support@spracht.com, or contact us at:

Spracht

974 Commercial Street, Suite 108

Palo Alto, CA 94303 USA

Ph: 650-215-7500

Fx: 650-485-2453

For repair or replacement of a failed product, allow 4 to 6 weeks for processing and shipment. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Spracht
974 Commercial Street, Suite 108
Palo Alto, CA 94303

www.spracht.com

© Copyright 2020 Spracht®. All rights reserved. Spracht® and the logo, and Aura Conference Speaker are trademarks and registered trademarks of Spracht®. Any other trademarks are properties of their owners.

