

Spracht® ZümRJ9	6
-----------------	---

Spracht® ZümRJ9	7
-----------------	---



<p>Warranty</p> <p>Spracht® warrants its products against defects or malfunctions in material and workmanship under normal use and service, with the exceptions stated below. This warranty lasts for one year from the original date of purchase. Coverage terminates if you sell or otherwise transfer the product. In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying the product. Spracht® shall (at its option) repair or replace a defective unit covered by this warranty, or shall refund the product purchase price. Repair, replacement with a new or reconditioned unit, or refund, as provided under this warranty, is your exclusive remedy. This warranty does not cover any damages due to accident, misuse, abuse, or negligence. Spracht shall not be liable for any incidental or consequential damages.</p> <p>Some states do not allow limitation or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Implied warranties of merchantability and fitness for a particular purpose are limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. To make a warranty claim, the purchaser must obtain a return authorization number (RA) from Spracht® (serial number and purchase date required), and then return the product to Spracht at purchaser's expense. A copy of the original dated receipt or shipping document must accompany the product. To obtain a return authorization, see Warranty on our website www.spracht.com, e-mail info@spracht.com, or contact us at:</p> <p>Spracht® 974 Commercial Street, Suite 108 Palo Alto, CA 94303 USA Tel: 650-215-7500 Fax: 650-485-2453</p> <p>©2018 Spracht®. All Rights Reserved.</p>	7
--	---

ZümRJ9M™ & ZümRJ9B™
Universal Deskphone Headsets

USER GUIDE
Monaural and Binaural
English Only

SPRACHT®

Spracht® ZümRJ9	6
-----------------	---

Spracht® ZümRJ9	7
-----------------	---

Spracht® ZümRJ9	8
-----------------	---

Headset Features

Monaural Version



- ① Adjustable Headband
- ② Ear Cushion
- ③ Flexible Boom for Microphone
- ④ Noise Canceling Microphone
- ⑤ Cable
- ⑥ Receiver

Binaural Version



Clothing Clip Closeup



Microphone Volume Adjuster
⑦ Adjustments A to G

Spracht® ZümRJ9

2

Connecting Your Headset

If your telephone has an extra headset port, plug the RJ-9 connector on the ZümRJ9 headset into the port. If not, unplug the headset from the phone and plug the headset's RJ-9 connector in the handset port.



Headset Wearing Options

Monaural (Single Ear)

You can wear the headset over either ear by rotating the microphone boom on the headband. You can adjust the headband until it's comfortable over your head.



Binaural (Dual Ear)



Spracht® ZümRJ9

3

Microphone Positioning

Keep the microphone positioned in front of your mouth at about 1" to 1.5" (30 to 40mm). The boom arm is flexible and can be adjusted to the proper position.

There is a clip that you can use to secure the cable to your clothing so that the cable doesn't get caught on something. Make sure there's enough slack to allow free movement of your head.

Microphone Volume Adjuster

There is an inline microphone volume adjuster on the cable, with positions marked from A to G. The best adjustment is based on the phone you are using.

Switch Position	IP Telephone Model	Microphone Amplification
A	Most standard Phones: Sangoma, NEC, Polycom, Panasonic, 3-Com, Aastra, Excene, Fanvil	No
B	Cisco IP Phones	No
C	Ascom and Philips Phones	No
D	Yealink, Avaya, HuaWei, Snom, Akuvox, Grandstream, IP Phone	No
E	Yealink, Avaya, HuaWei, Snom, Akuvox, Grandstream, IP Phone	Yes: +9dB
F	Most standard phones: NEC, Polycom, Panasonic, 3-Com, Aastra, Escene, Fanvil	Yes: +9dB
G	Avaya Callmaster V and VI, Cisco IP Phones	Yes: +9dB

Spracht® ZümRJ9

4

Additional Adjustments

After you have chosen the setting based on your phone, you may want to increase the volume if you find you are not heard well enough on the other end. In that case, you can switch to a setting that will increase the microphone volume.


Switch position A: change to position F.

Switch position B: change to position G.

Switch position D: change to position E.

Ear Cushion Removal

Using both thumbs, remove the cushion by gently prying the earplate away from the groove on the receiver.

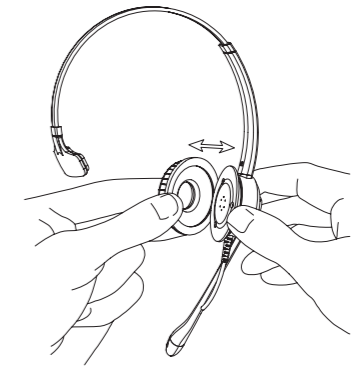

Spracht® ZümRJ9

5